

Model Number

CVS58*

Features

- Industrial standard housing Ø58 mm
- 16 Bit singleturn
- Galvanically isolated CAN interface
- DSP 406, CLASS 1 and 2
- Servo or clamping flange
- 2 limit switches

Description

In addition to DeviceNet, PROFIBUS and AS-Interface rotary encoders, we have broadened our product line of bus-capable absolute encoders with the CVS58 for CANopen.

The bus electronics module is integrated into the removable housing cover. This makes it possible to mount or replace new rotary encoders and the matching bus electronics separately during installation or service.

Absolute encoders deliver an absolute step value for each angle setting. All these values are represented by code samples on one or more code disks. The code disks are screened by an infrared LED and the obtained bit sample is detected by an optical array. Its signals are electronically amplified and forwarded on to the interface for processing. The absolute encoder has a maximum basic resolution of 65536 steps per revolution (16 Bits).

The integrated CAN bus interface of the absolute encoder supports all CANopen functions. The following operating modes can be programmed, and can be selectively turned on or off:

- Polled mode
- Cyclic mode
- Sync mode

The device is designed for shaft assembly and is available in servo flange or clamping flange design.

Functional safety related parameters $\mathsf{MTTF}_{\mathsf{d}}$ Mission Time (T_M) L_{10h} Diagnostic Coverage (DC) **Electrical specifications** Operating voltage U_B No-load supply current I0 Linearity Output code Code course (counting direction) Interface Interface type Resolution Single turn Overall resolution

Standard conformity Connection Terminal compartment Standard conformity Protection degree

Transfer rate

Climatic testing Emitted interference Noise immunity Shock resistance Vibration resistance **Ambient conditions** Operating temperature Storage temperature **Mechanical specifications** Material Combination 1

Combination 2 (Inox)

Mass

Rotational speed Moment of inertia Starting torque Shaft load Axial Radial

Approvals and certificates

UL approval

0 % 10 ... 30 V DC max. 350 mA ± 2 LSB at 16 Bit, ± 1 LSB at 13 Bit, ± 0,5 LSB at 12 Bit binary code cw ascending (clockwise rotation, code course ascending) cw descending (clockwise rotation, code course descending) CANopen up to 16 Bit up to 16 Bit max. 1 MBit/s DSP 406, CLASS 1 and 2 in removable housing cover

1.9 E+11 at 6000 rpm and 20/40 N axial/radial shaft load

DIN EN 60529, shaft side: IP64 (without shaft seal)/IP66 (with shaft seal) housing side: IP65 DIN EN 60068-2-3, no moisture condensation EN 61000-6-4:2007 EN 61000-6-2:2005 DIN EN 60068-2-67, 100 g, 6 ms DIN EN 60068-2-6, 10 g, 10 ... 1000 Hz

-40 ... 85 °C (-40 ... 185 °F) -40 ... 85 °C (-40 ... 185 °F)

housing: powder coated aluminium flange: aluminium shaft: stainless steel housing: stainless steel flange: stainless steel shaft: stainless steel approx. 550 g (combination 1) approx. 1000 g (combination 2) max. 12000 min ⁻¹ 30 gcm² ≤ 3 Ncm (version without shaft seal)

40 N 110 N

80 a

20 a

cULus Listed, General Purpose, Class 2 Power Source


ž


Subject to reasonable modifications due to technical advances.

Copyright Pepperl+Fuchs, Printed in Germany

1

Dimensions

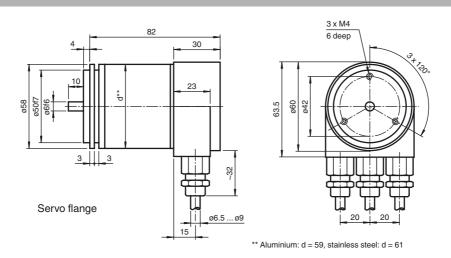

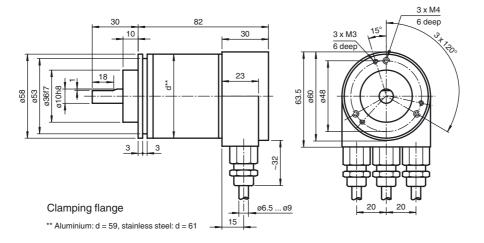

Accessories


2


AH 58-B1CA-2BW

Electrical connection

Terminal	Cable	Explanation	
\perp	-	Ground connection for power supply	
(+)	Red	Power supply	
(-)	Black	Power supply	
CG	-	CAN ground	
CL	Blue	CAN low	
CH	White	CAN high	
CG	-	CAN ground	
CL	Blue	CAN low	
СН	White	CAN high	

Indicating and operating elements

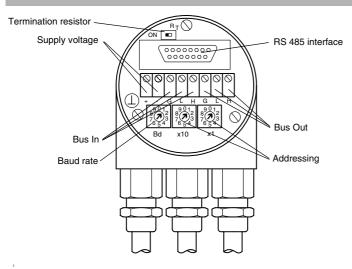

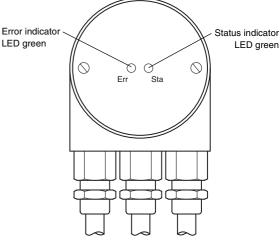

Adjusting the participant address

The participant address can be adjusted with the rotary switches. The address can be defined between 1 and 96, and may only be assigned once. The addresses 97 ... 99 are reserved.

Adjusting the termination resistor

The terminating resistor R_T (121 Ω) can be connected to the circuit by means of the switch:





x1

x10





Baud rate adjustment

Baud rate [kBit/s]	Switch position	Baud rate [kBit/s]	Switch position
20	0	500	5
50	1	800	6
100	2	1000	7
125	3	reserved	8 and 9
250	4	-	-

LED-indicators

LED red	LED green	Meaning	
off	off	No voltage supply	
off	on	Encoder ready, boot-up message not transmitted, yet. Possible reasons:	
		- no further participant present	
		- wrong baud rate	
		- encoder in prepared status	
flashing	on	Boot-up message transmitted, Device configuration possible.	
on	on	Normal operation mode, encoder in operational status.	

Programmable CAN operating modes

Mode	Explanation		
Polled mode	The connected host requests the current actual position value via a remote transmission request telegram. The abso- lute encoder reads in the current position, calculates all parameters that have been set and sends back the process actual value through the same CAN identifier.		
Cyclic mode	The absolute encoder sends the current actual process value cyclically, without being prompted by the host. The cycle time can be programmed in milliseconds for values between 1 ms and 65536 ms.		
Sync mode	After the sync telegram has been received by the host, the absolute encoder sends the current actual process value. If multiple nodes should respond to the sync telegram, the individual nodes report one after the other according to their CAN identifier. There is no programming of an offset time. The sync counter can be programmed so that the rotary encoder does not transmit until after a defined number of sync telegrams.		

Programmable rotary encoder parameters

Parameter	Explanation		
Operating parameter	The direction of rotation (complement) can be specified by parameter as the operating parameter. This para- meter determines the direction of rotation in which the output code will ascend or descend.		
Resolution per revolution	The "Resolution" parameter is used to program the rotary encoder so that a desired number of steps can be implemented in reference to one revolution.		
Preset value	The preset value is the desired position value that must be achieved for a specific physical setting of the axis. The preset value parameter is used to set the actual position value to the desired actual process value.		
Min. and max. limit switch	A total of two positions can be programmed. The absolute encoder sets one bit to high state in the 32 Bit actual process value if a value falls outside the range between these two positions.		


Accessories

For type	Accessories	Name/defining feature	Order code
		D1: Ø10 mm, D2: Ø10 mm	9401
	Couplings	D1: Ø10 mm, D2: Ø10 mm	9404
	Couplings	D1: Ø10 mm, D2: Ø10 mm	9409
		D1: Ø10 mm, D2: Ø10 mm	KW
		Plastic	9101, 10
	Measurement wheels with cir-	Pimpled rubber	9102, 10
	cumference of 500 mm	Knurled aluminium	9103, 10
CVS58N-011		Knurled plastic	9112, 10
		Plastic	9108, 10
	Measurement wheels with cir-	Pimpled rubber	9109, 10
	cumference of 200 mm	Knurled aluminium	9110, 10
		Knurled plastic	9113, 10
	Mounting aids	Mounting bracket	9203
		Mounting bracket	9213
CVS58N-032		D1: Ø6 mm, D2: Ø6 mm	9401
		D1: Ø6 mm, D2: Ø6 mm	9402
	Couplings	D1: Ø6 mm, D2: Ø6 mm	9404
		D1: Ø6 mm, D2: Ø6 mm	9409
		D1: Ø6 mm, D2: Ø6 mm	KW
	Mounting aids	Mounting bracket and set	9300 and 9311-3
		Eccentric clamping elements	9310-3

For additional information on the accessories, please see the "Accessories" section.

4

Order code

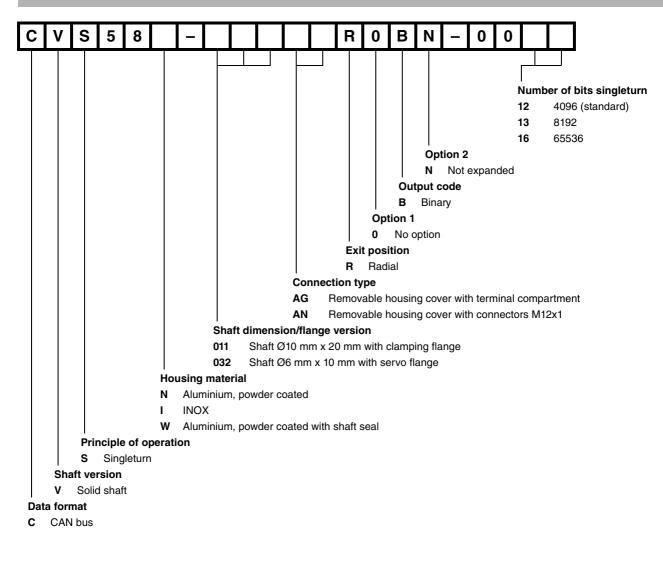

Release date: 2011-05-17 08:23 Date of issue: 2011-05-17 T2444_ENG.xml