

Model Number

SBL-8-H/136

Background suppression sensor with 4-pin, M12 x 1 connector

Features


- Minimal black/white difference
- For installation between the rollers on a roller conveyor
- Modern dual push-pull outputs
- Protection degree IP65

Product information


Sensors of the SBL series are used to easily control material flow on roller conveyors in material handling and other branches.

The SBL series is a precise background suppression sensor according to the 3 element method. The sensor features superior background suppression and a very good ambient light immunity. Material and transport container of all colors and opacities are reliably detected.

The special design allows the sensor to be mounted between the rollers of a roller conveyor or any other conveying unit. Mounting between the rollers is easy and protects the sensor. Dimensions

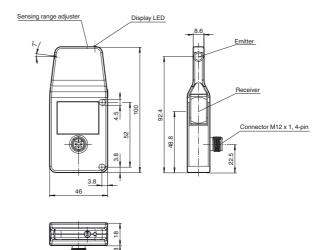

Electrical connection

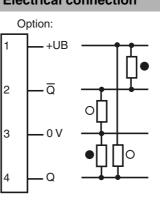




Pinout



Indicators/operating means

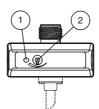

1	Signal display	yellow	
2	Sensing range adjuster		

Subject to modifications without notice Pepperl+Fuchs Group US www.pepperl-fuchs.com fa-info

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

76-4411 Singapore

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data


lechnical data		
General specifications		
Detection range		40 900 mm
Detection range min.		40 340 mm
Detection range max.		40 900 mm
Adjustment range		340 900 mm
Reference target		standard white 200 mm x 200 mm
Light source Light type Black/White difference (6 %/90 %) Diameter of the light spot		IRED
		modulated infrared light , 880 nm
		< 10 %
		approx. 60 mm at detection range 900 mm
Ambient light limit		continuous light 30000 Lux, Fluorescent lamp 5000 Lux
Indicators/operating means		
Function display		LED yellow: lights when object is detected
Controls		Detection range adjuster
Electrical specifications		5,
Operating voltage	U _B	24 VDC -20% +10%
Ripple	чB	max. 10 %
No-load supply current	I ₀	max. 30 mA
Output	.0	
Switching type		light on
Signal output		2 Push-pull outputs, short-circuit protected, reverse polarity pro
Signal output		tection
Switching voltage		max. 30 V DC
Switching current		max. 100 mA
Switching frequency	f	100 Hz
Response time		5 ms
Ambient conditions		
Ambient temperature		-20 50 °C (-4 122 °F)
Storage temperature		-30 60 °C (-22 140 °F)
Mechanical specifications		
Protection degree		IP65
Connection		connector M12 x 1, 4-pin
Material		
Housing		plastic
Optical face		plastic lens
Mass		approx. 50 g
Compliance with standards and ves	directi-	
Directive conformity		EMC Directive 2004/108/EC
Standard conformity		
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007
Shock and impact resistance		IEC / EN 60068. half-sine, 40 g in each X, Y and Z directions
Vibration resistance		IEC / EN 60068-2-6. Sinus. 10 -1000 Hz, 10 g in each X, Y and Z directions
Approvals and certificates		
		chill us Listed, Class 2 Power Source, Type 1 enclosure

UL approval

CCC approval

cULus Listed, Class 2 Power Source, Type 1 enclosure Products with a maximum operating voltage of ≤36 V do not bear a CCC marking because they do not require approval.

Curves/Diagrams

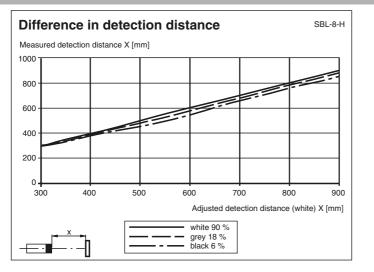

Additional Information

2

Subject to modifications without notice USA: +1 330 486 0001 Pepperl+Fuchs Group www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Germany: +49 621 776-4411 fa-info@pepperl-fuchs.com

Copyright Pepperl+Fuchs Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com PEPPERL+FUCHS

OMH-SBL-01

Mounting bracket for sensors of SBL series

Schraubendreher 0,5 x 3,0 mm Screwdriver

Additional accessories can be found in the Internet.

Release date: 2011-02-23 16:52 Date of issue: 2011-02-23 219476_ENG.xml

Intended use:

The transmitter and receiver are located in the same housing for direct detection sensors with background masking. Marking of objects outside the detection range is achieved by arranging the angle between the transmitter and receiver (2 receiver elements).

Objects are detected independently of the structure and colour of the surface.

The special design of the sensors makes it possible to install them between two rollers in the roller back-up conveyor systems under the material that is being moved. This allows for installation that saves space and prevents mechanical damage of the sensor caused by material being conveyed.

Mounting instructions:

The sensors can be directly fastened in place with the pass-through bore holes or can be attached with a support bracket or a clamp (the last two are not included in delivery).

The surface underneath must be flat to prevent the housing from moving when it is tightened into position. We recommend securing the nut and screw in place with spring washers to prevent the sensor from going out of adjustment.

For versions SBL-8-H-SL, -V, -Z

As many as 25 sensors can be cascaded with the aid of just one power supply. A solenoid valve is energised if the corresponding sensor itself or its predecessor in the cascade does not see any object.

It is also possible to energise the values of all sensors included in the cascade with block movement (V_T). To do this, apply the positive supply voltage (+UB) on the input V_T of the first sensor.

Adjustment:

Align the sensor to the background. If the yellow LED is lit, the detection range should be reduced with the detection range adjuster until the yellow LED goes out.

Object detection:

Position the object to be detected in the path of the beam. If the object is detected, the yellow LED lights up. If it does not light up, the detection range must be further adjusted on the potentiometer until it lights up when an object is detected.

Version SBL-8-H-SL-V-Z only:

The two adjusting mechanisms on the front side of the sensor can be used separately for timer functions for the switching on or switching off process.

This results in a delay defined by the adjuster between the change of state (object detected -> object not detected or vice-versa) and the switching process. The duration of the delay can be set for up to 2 seconds.

Cleaning:

We recommend cleaning the optical surface and checking all connections at regular intervals.

Note:

Use a screwdriver to adjust the sensing range. We strongly recommend to use the screwdriver given in the accessories section.

Subject to modifications without notice

