







## **Model Number**

### UB300-18GM40-E5-V1-Y242981


Single head system

#### **Features**

- Short design, 40 mm
- Function indicators visible from all directions
- Switch output
- 5 different output functions can be
- **Program input**
- **Temperature compensation**

## **Diagrams**

# Characteristic response curve

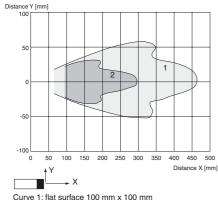

Curve 2: round bar, Ø 25 mm

# **Technical data**

General specifications	
Sensing range	30 300 mm
Adjustment range	50 300 mm
Unusable area	0 30 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 390 kHz
Response delay	approx. 30 ms
Indicators/operating means	

LED yellow indication of the switching state flashing: program function object detected

I FD red solid red: Error red, flashing: program function, object not detected

#### **Electrical specifications**

Operating voltage U<sub>B</sub> 10 ... 30 V DC , ripple 10  $\%_{SS}$ 

No-load supply current I<sub>0</sub> ≤ 20 mA Input

Input type 1 program input

operating distance 1: -U<sub>B</sub> ... +1 V, operating distance 2: +6 V

... +U<sub>B</sub>

input impedance: > 4,7 k $\Omega$  program pulse:  $\geq$  1 s

Output Output type 1 switch output E5, PNP NO/NC, programmable Rated operational current I<sub>e</sub> 200 mA, short-circuit/overload protected

Default setting Switch point A1: 300 mm Switch point A2: 50 mm, NC contact

Voltage drop U<sub>d</sub>  $\leq$  3 V Repeat accuracy ≤1 % Switching frequency ≤ 13 Hz

Range hysteresis H 1 % of the set operating distance Temperature influence ± 1.5 % of full-scale value

Ambient conditions

-25 ... 70 °C (-13 ... 158 °F) Ambient temperature Storage temperature -40 ... 85 °C (-40 ... 185 °F)

Mechanical specifications

Connection type Device connector M12 x 1, 4-pin

Protection degree IP67 Material

Housing brass, nickel-plated

Transducer epoxy resin/hollow glass sphere mixture; foam

polyurethane, cover PBT

25 g

Compliance with standards and directives


Standard conformity

EN 60947-5-2:2007 Standards IEC 60947-5-2:2007

Approvals and certificates


cULus Listed, General Purpose **UL** approval CSA approval cCSAus Listed, General Purpose

### **Dimensions**

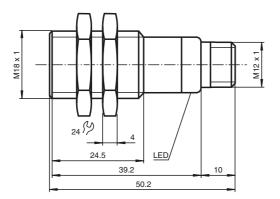

# **Additional Information**


## Programmable output modes

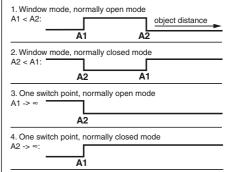

5. A1 -> ∞, A2 -> ∞: Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

# **Electrical Connection**

Standard symbol/Connections: (version E5, pnp)

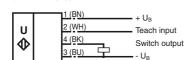

Core colours in accordance with EN 60947-5-2.

# **Pinout**

## Connector V1



### **Accessories**

#### **UB-PROG2**

Programming unit

#### OMH-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

#### RF 18

Mounting flange, 18 mm

#### **BF 18-F**

Mounting flange with dead stop, 18 mm

#### BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

## V1-G-2M-PVC

Cable socket, M12, 4-pin, PVC cable

# V1-W-2M-PUR

Cable socket, M12, 4-pin, PUR cable

# Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

### **TEACH-IN** window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UR
- Set target to far switching point
- TEACH-IN switching point A2 with +U<sub>R</sub>

### **TEACH-IN** window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>R</sub>
- Set target to far switching point
- TEACH-IN switching point A1 with -UR

#### **TEACH-IN** switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>R</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>B</sub>

## **TEACH-IN** switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U<sub>B</sub>

## **TEACH-IN** detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB
- TEACH-IN switching point A2 with +UB

# **LED Displays**

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

#### Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be